 



Pleated Blinds Fitting Instructions

Free Hang Blinds (Rectangular) Top Fixing Brackets


Fix two brackets to the ceiling or lintel using holes drilled at least (25mm) from the window frame and at least (70mm) from each end of the blind. Any remaining brackets should be evenly spaced between the first two brackets.



 Spring fix brackets



Turnbuckle top fix brackets

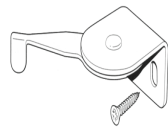

Face fix brackets

Face Fixing Brackets

Fix two brackets to the wall or window frame as closely as possible to the ceiling or lintel with the same spacing as

Recommended for **top fixing brackets**

Fitting The Track

The blind must be fitted with the control cords at the front. If using spring type top fix brackets push blind rail up into bracket to snap fit. If using turnbuckle brackets turn lever so that the two

Projections on the bottom of the bracket line up with the slot in the headrail then push the levers to lock the headrail in place.

Ensure that the internal track cords are clear of the Brackets.

Operating Your Free Hang Blind

To lower the blind hold the control cord in a vertical position and pull it downwards slightly to release the cord locking mechanism. Keeping hold of the cord allow the blind to drop slowly to the desired position. Pull the cord away from the blind to lock the mechanism then release the cord.

To raise the blind pull the cord until the blind is at the desired level and move the cord outwards to lock it in place.

Skylight Blinds (Rectangular)

N.B The blind will be held together with elastic bands. These must not be removed until you have read these instructions.

Fitting The Brackets

Fit the brackets to the top and bottom of the window openings following the instructions for the free hang blinds. Brackets must be fixed level with the positions from which the blind measurements were taken.

Fitting The Tracks

Without removing the elastic bands fix the top rail to the brackets at the top of the window. Support the lower rail and remove two outside elastic bands. Turn this lower rail so that the cords wrapped around unwind. Maintain sufficient tension to ensure that the cords do not slip of the end off the rail and become entangled. When the cords are fully unwrapped place the bottom rail in it's brackets.

The friction cords, which are at the outside of the blind, are connected by an internal spring. They they have been adjusted to the correct length during Manufacture. Fitting the lower track into the brackets stretches this spring and firm pressure must be used to locate the track into the brackets. If for any reason, the cords the friction cords are too loose or too tight they can be adjusted easily. Release the bottom rail and undo the knot which joins the cords to the spring. Re-tie the knot in the position which allows the middle rail to move up and down easily and remain in any position to which it is set. When the bottom rail is replaced in it's Brackets.

Tensioning The Nylon Supports

The ends of the nylon fabric supports in the bottom rail are fitted with a barrel clamp. After the blind has been fitted it may be necessary to re-adjust the tension if so release the bottom rail and undo the screw on the clamp pulling the nylon until it is taut.

Re-tighten each one taking care not to over-tighten.

