

Roman Blinds

fitting instructions

fittings

- 1** Brackets:
quantity to suit
length of blind



- 2** Wood screws:
min 4



- 3** Screws: min 4
Rawl plugs:
min 4



- 4** Blind: 1



Outside Recess

If fitting the blind outside the window, measurements (C) will need to be the same. To work out (C), simply minus (B) from (A) and divide the answer by two. Follow instructions for FACE FIXING

Inside recess


Decide whether to FACE or TOP FIX. FACE FIX to fit the bracket to the window frame. TOP FIX to the lintel if the window frame is uPVC, or if there are any obstructions, e.g. window handles.



TOP FIX FACE FIX

step 1

Place the front lip of the headrail into the first cradle on the bracket. Gently push back against the cradle and it will withdraw, allowing you to hook the back lip of the headrail into the back cradle of

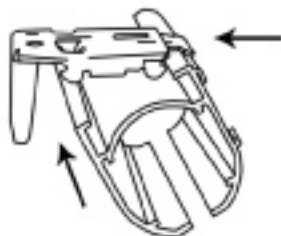

Simply release the headrail and your blind will be locked in place.




step 3

WARNING

IN THE INTEREST OF SAFETY, IT IS ADVISABLE TO KEEP ALL PULL CORDS AND CHAIN/BEAD CORDS OUT OF THE REACH OF CHILDREN.

Place blind in fitting position. Space the brackets evenly.



B Possible bracket positioning

step 2


Top Fixing

Measure the distance that any handles protrude from the frame. Mark this measurement on the lintel and use it to position the back of the bracket. Mark the position of holes and screw bracket to lintel using screws and rawl plugs supplied.



Face Fixing

Position bracket with swing arm facing towards you, and mark holes. Screw bracket in place. Use rawl plugs if fitting to the wall.

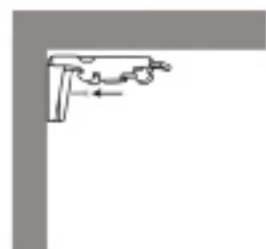

Questions?



just call us

0845 652 1963