


Vertical Blinds Fitting Instructions

With these instructions you will find sufficient brackets and wood screws for fitting your blind

Fitting The Brackets

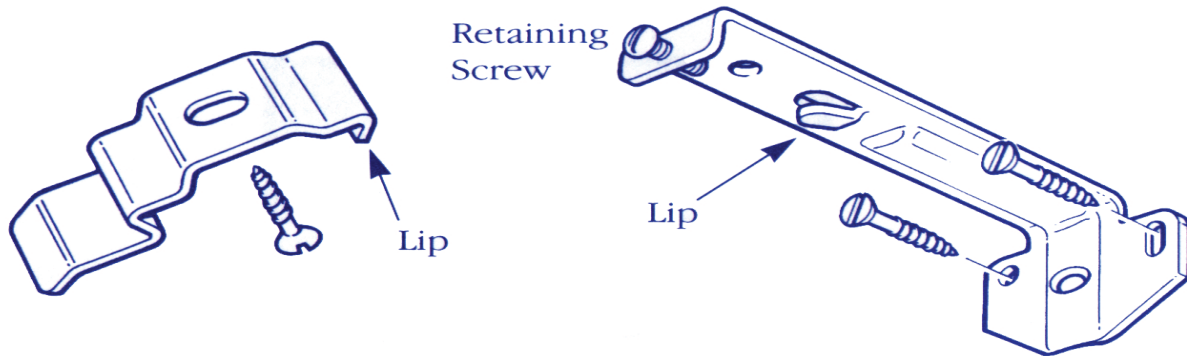

Top Fixing Brackets

Fix brackets to ceiling or lintel with holes drilled on a line 75mm from the wall or window frame for 127mm width louvres or 55mm for blinds with 89mm louvres.

Fit end brackets about 400mm from each end of the track and any remaining brackets should be spaced evenly between the end brackets.

Face Fixing Brackets

Fix brackets to the wall or window frame as closely as possible to the ceiling or lintel with the same spacing as recommended for top fix brackets.

Fitting The Track

Track must be fitted into the brackets keeping the controls to the side ordered.

Locate the small lip projecting from the brackets and place the track up against the lip, lining up the lip with the groove of the track. Push the track up into the bracket. Spring clip brackets will hold your track without further adjustment.

Fitting The Louvres

Turn the hooks so they are 90 degrees to the track. Hang louvres keeping all the seams one way. Your blind is now ready to operate.

IMPORTANT DO NOT TRANSVERSE BLINDS WITH LOUVRES IN CLOSED POSITION. ALWAYS TURN THEM 90 DEGREES TO THE TRACK BEFORE OPERATING CORD CONTROL