


## Vertical Blinds Fitting Instructions

With these instructions you will find sufficient brackets and wood screws for fitting your blind

### Fitting The Brackets

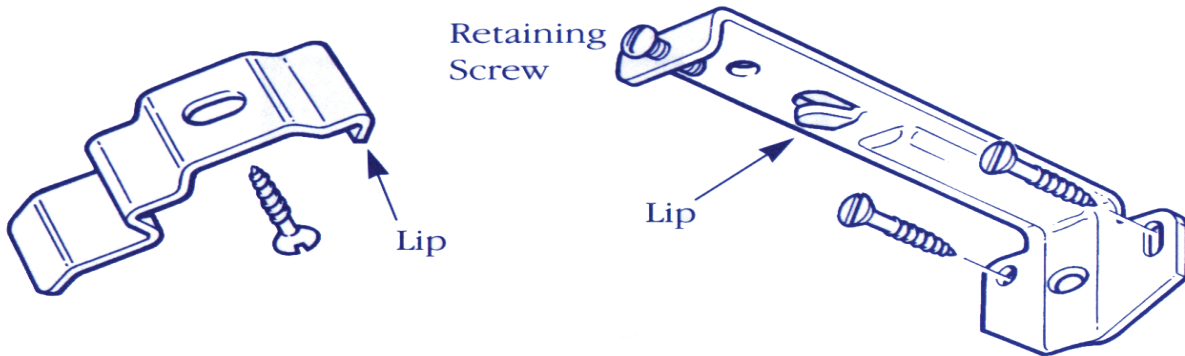

### Top Fixing Brackets

Fix brackets to ceiling or lintel with holes drilled on a line 75mm from the wall or window frame for 127mm width louvres or 55mm for blinds with 89mm louvres.

Fit end brackets about 400mm from each end of the track any remaining brackets spaced evenly between the end brackets.

### Face Fixing Brackets

Fix brackets to wall or window frame as closely as possible to the ceiling or lintel with the same spacing as recommended for top fix brackets

### Fitting The Track

Track must be fitted into brackets keeping controls to side as ordered.

Locate the small lip projecting from bracket into groove of track. Push track up into bracket. Spring clip brackets will hold your track without further Adjustment.

### Fitting The Louvres

Turn hooks so they are 90 degrees to the track.  
Hang louvres keeping all seams one way.  
Your blind is now ready to operate.

**IMPORTANT DO NOT TRANSVERSE BLINDS WITH LOUVRES IN CLOSED POSITION. ALWAYS TURN THEM 90 DEGREES TO THE TRACK BEFORE OPERATING CORD CONTROL**